

Standard Potholder-(set of 2)

Supplies:

- 2- 9" X 9" pieces of fabric for fronts
- 2- 9" X 9" coordinating pieces of fabric for backs
- 2- 9" X 9" pieces of Insul-Bright Thermal Batting
- 2- 9" X 9" pieces of cotton batting
- 2- 2" X 5" fabric for loop hanger


To make loop hanger:

Fold each 2" X 5" in half lengthwise (wrong sides together) and press to crease.

Open up and fold each outside edge to the center-meeting at the crease, then fold one side over to meet the other and press. Top stitch along the open side

For each potholder:

Lay the front piece of fabric right side up. Fold the loop in half so raw edges are together and place at the left hand corner matching raw edge to raw edge with loop top hanging down-at least ¼" away from edge as shown below so it doesn't get caught in the side seam-baste in place.

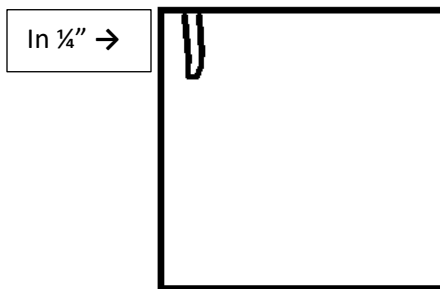

Layer pieces from bottom up as follows:

Front piece (with loop showing) right side up

Back piece-right side down

Insul-Bright

Regular cotton batting

Sew all the way around (careful to not catch loop in the seam), leaving a 4" area open for turning.

Clip corners, turn right side out and topstitch.

